


Assembly Instructions: Speed Control Kit

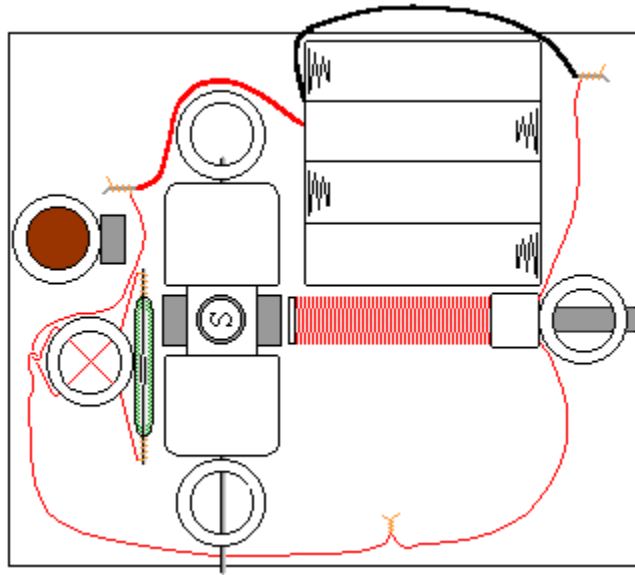

Speed control kit is a variable speed unit for the reed switch motors. It works with kits #1-5 and 8-9 and may work with any reed switch motor you built yourself. This kit allows you to control and gradually change the speed of the motor from a complete stop to the maximum speed. It will even increase the normal speed of the motor 10-25%.

Speed control unit is a part of the kit #10. QuikLock motors #13-14 also include speed control.


Instructions

1. Find the correct orientation of the speed control magnet. CAUTION: If you glue the magnet incorrectly, the speed control will still work; however, the consumed current will grow significantly. This may quickly destroy the reed switch, drain the batteries, and overheat the motor parts.


It is very easy to find the orientation of the magnet using a multimeter capable of measuring currents up to 2 A.

Set the multimeter on the highest current measurement range (10A) and connect it to the motor as shown in the picture below. You will need to measure the consumed current of the motor.


Hold the magnet as shown in the picture and slowly move it from position A to position B. The motor should be working during this experiment. Watch how the consumed current changes. If the magnet is oriented properly, the current should decrease. If it grows, the magnet is oriented incorrectly. Turn it 180° so the other pole will be facing the reed switch. Remember this pole, it will face outwards when glued to the speed control stand.

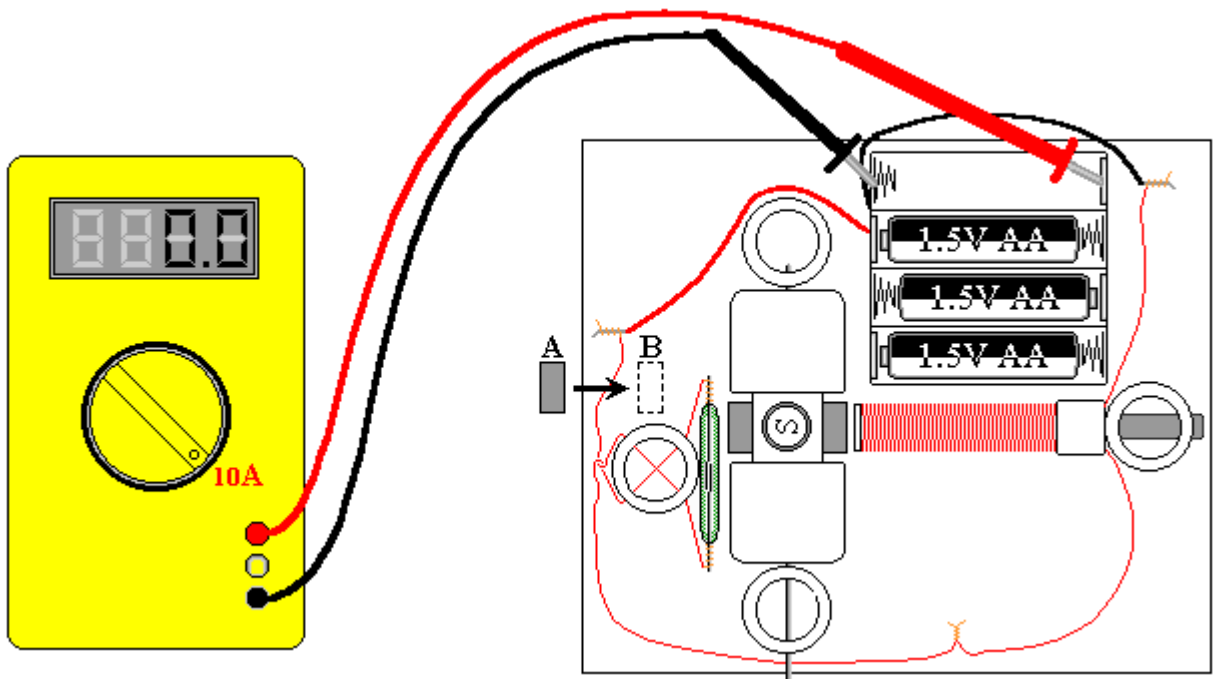


2. Glue the magnet to the speed control stand. Once again, if the magnet is oriented properly, the consumed current should decrease when the magnet approaches the reed switch.

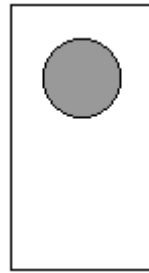


3. Experiment with the speed control stand. Its approximate position is shown below. When you rotate this stand the speed of the motor should change according to the pictures.

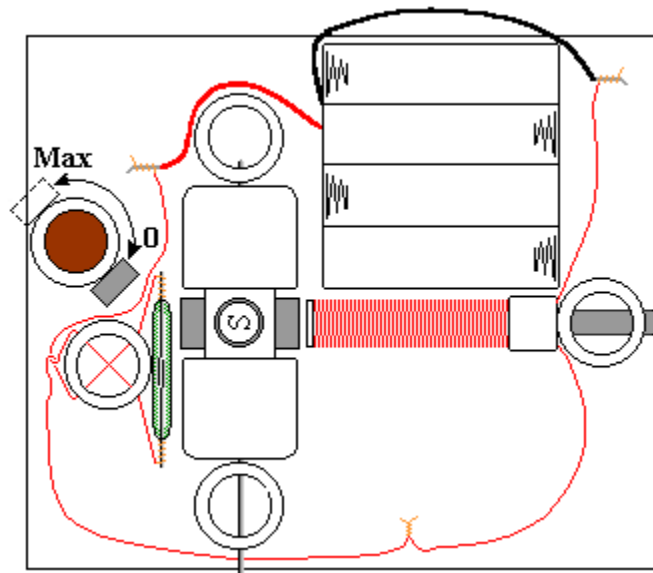

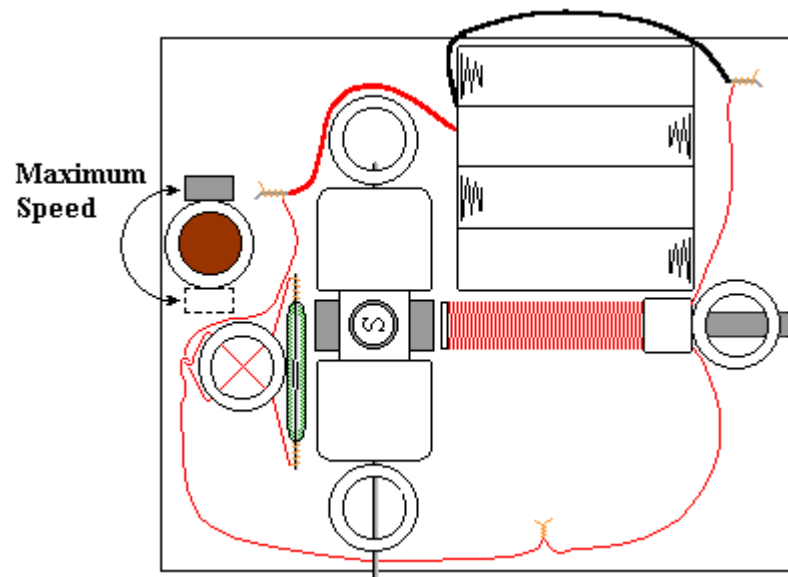

4. After you find the best position for the unit, glue the inner stand to the board as shown below. The inner stand allows the rotation of the outer speed control stand.

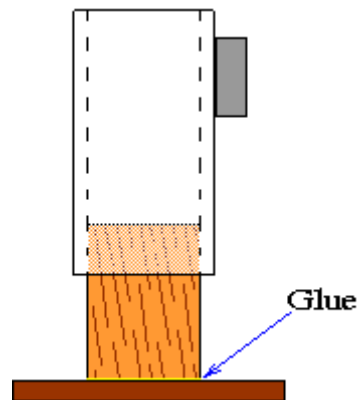

If the outer stand rotates too easy and the vibration generated by the motor moves it, wrap the inner stand with a piece of scotch tape or thin piece of paper. If you are having difficulties inserting the inner stand you may need to sand it slightly with the sandpaper.